

Owner's Manual and Instructions

Mosaic Fire Bowl

Important!


Please read and follow ALL instructions before assembling or using this product, particularly the safety statements. Failure to follow instructions and warnings could result in damage to property, serious injury or death.



Parts Check List

Check package for all parts needed for assembly

	Part Description	QTY.	Part.
<input type="checkbox"/>	Mosaic Surround	1	A
<input type="checkbox"/>	Fire Bowl	1	B
<input type="checkbox"/>	Legs	4	C
<input type="checkbox"/>	Leg Supports	2	D
<input type="checkbox"/>	Log Grate	1	E
<input type="checkbox"/>	Lift Tool	1	F
<input type="checkbox"/>	Spark Screen	1	G
<input type="checkbox"/>	Hardware Pack	1	H
<input type="checkbox"/>	Screen Handle	1	I
<input type="checkbox"/>	Storage Cover	1	J

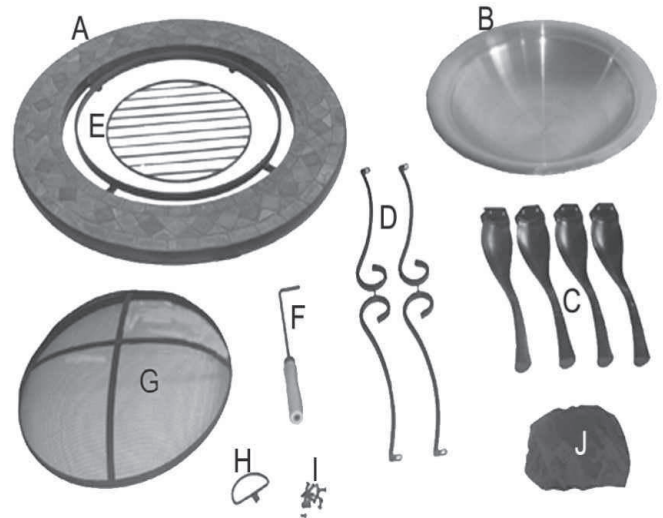

Check all items for damage.

Call us at (800)230-6530 or email us: customerservice@asiadirectinc.net if you have any problems or questions. Additional product information is available at www.asiadirectinc.net

Assembly Instructions

- Carefully unpack all parts.
- Carefully place Mosaic Surround tile down on non-abrasive surface. Align holes of Legs with holes on bottom of Surround. Insert long screws into each hole and tighten with screw driver (Figure 1).
- Align holes of Leg Supports (D) with holes of Leg bracket. Insert short screws and Connect two leg supports by using long screw and nut and tighten all screws this time (Figure 2).
- Carefully turn fire pit over and insert Fire Bowl and place Log Grate in bowl. (Figure 3. Figure 4)
- Attach Handle to Spark Screen. Place Spark Screen on bowl.

Figure 1



Figure 2



Figure 3



Figure 4



(SEE REVERSE)

WARNING

- Outdoor Use Only. Never use in enclosed area. Use in unventilated areas will endanger your life.
- Keep away from all combustible materials including gasoline and other flammable liquids and vapors.
- NEVER use flammable accelerants, such as: Gasoline, Alcohol, Paint Thinners, Kerosene, etc. to start a fire. Serious injury or property damage could result.
- Use on a level, noncombustible surface only.
- Keep away from house, garage, balconies, or overhangs.
- Avoid using during dry or windy conditions.
- Keep out of reach of children.
- Do not overfill or use to burn leaves or trash.
- Exercise the same care you would with an open fire.
- Never leave unit unattended while hot or in use.
- Completely extinguish fire before leaving.
- Use gloves to handle or move. Ashes can remain hot for a long time after fire is extinguished.
- Dispose of cold ashes properly.
- Use storage case only when unit is cool to the touch.

Contact local authorities regarding possible burn restrictions before using product.

ADDITIONAL INFORMATION:

Cleaning Instructions:

- Fire bowl may be cleaned with water and mild detergent. Do not use abrasive detergents or pads.
- Carry case can be cleaned with damp cloth and mild detergent. Inner fabric of case can be removed and washed in gently cycle.

***Call us at (800)230-6530, M-F, 9 a.m. - 5 p.m. EST,
or email us: customerservice@asiadirectinc.net, if you have any
problems or questions regarding this product.***

Additional product information available at:
www.asiadirectinc.net

Important Information

1. Wipe manufacturing oils off firebowl surface before using for the first time.
2. Copper or stainless steel surfaces will discolor after use. This is normal and expected.
3. As with any outdoor burning appliance, periodic maintenance is required to return the painted surfaces to original appearance. When rust appears on the painted surfaces, use sandpaper or a steel brush to remove loose particles and re-coat with paint intended for high-temperature surfaces. Select a rust-inhibiting paint suitable for fireplace maintenance and follow label directions on paint. Keep fire pit covered when not in use.